



# HunterDouglas PowerView™ Repeater


QUICK START GUIDE



1

## REPEATER


## POWER SUPPLY

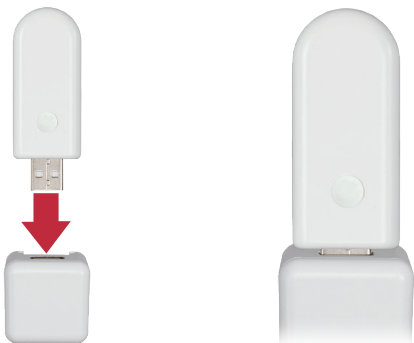

### Plug Repeater into power supply.

Each kit includes one PowerView™ Repeater and one power supply. Be sure the USB connector is firmly seated.


2

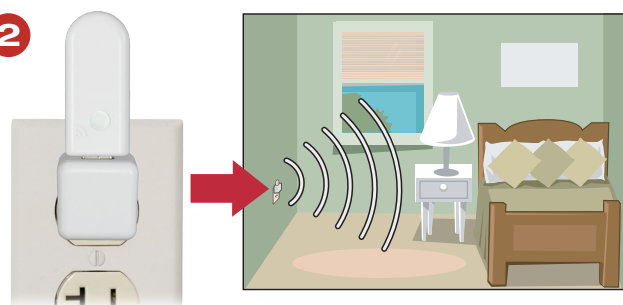

### Plug power supply into wall outlet.

The green LED will come on to indicate the Repeater has power, but not yet been joined to a PowerView™ Shade Network. One Repeater per room with PowerView window coverings is recommended. Be sure the PowerView Repeater is pointing up and the wall outlet has power.

3

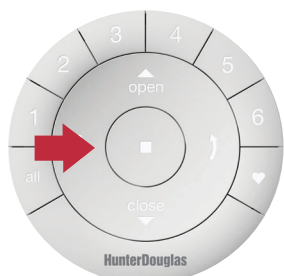

### Join PowerView™ Shade Network.

1. Press and hold ■ Stop on the remote that was used to create the PowerView™ Shade Network, until the lights on the remote flash (approx. 4 sec.). 2. With the remote no more than 3 feet from the Repeater, press and release ■ Stop. 3. The Repeater LED will flash green once to signal it has now been joined to the PowerView Shade Network and then will turn off (Repeater is still active).

4

### Resetting the Repeater

To reset the Repeater to factory default, press and hold the button on the Repeater for 6 seconds. The green LED will come on to indicate the Repeater has power, but has not been joined to a PowerView™ Shade Network.

### Troubleshooting

- My Repeater does not flash when I send a Test Repeater signal to it.
- Make sure the Repeater is completely seated in the USB port on the power supply. Check that the outlet that the USB power supply is plugged into has power.
- Test the Repeater with a different USB power supply.
- Add the Repeater to the PowerView™ Shade Network. Refer to instructions in this guide.

5



### Test signal to Repeater.

Press and hold the **P** button on the back of the PowerView™ Hub. The light on the PowerView Repeater should turn **GREEN**. If it does not, you may need to move the location of the Repeater or add an additional Repeater.

#### U.S. Radio Frequency FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Industry Canada

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### Class B Digital Device Notice

This Class B digital apparatus complies with Canadian ICES-003, RSS-Gen and RSS-210.

CAN ICES-3 (B)/NMB-3(B)

#### European Conformity

We, the undersigned,  
Hunter Douglas Window Fashions  
One Duette Way, Broomfield, CO 80020, USA  
Hunter Douglas Europe B.V.  
Piekstraat 2, 3071 EL Rotterdam, The Netherlands  
certify and declare under our sole responsibility that the PowerView™ Repeater conforms with the essential requirements of the EMC directive 2004/108/EC and R&TTE directive 1999/5/EC.

A copy of the original declaration of conformity may be found at [www.hunterdouglas.com/RFCertifications](http://www.hunterdouglas.com/RFCertifications).

